

1. Locating the Components

A. Transformer wire



B. Brush cap



C. Brush




2. Replacing Brush 1

A. Gently remove the RED transformer wire.



B. With a flat head screw driver, unscrew the cap on the housing of the brush. Note: unscrew gently and slowly to prevent stripping the screw, and also the spring from popping out.

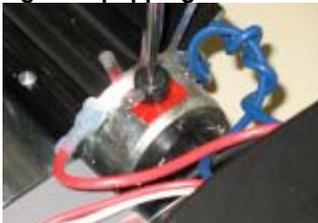


C. Gently remove the old brush and replace with the new brush. Note: the brush is small and fragile.




D. While holding the brush in place, take the cap and place it back on top of the brush.

E. Screw the cap back into place until snug. Do not over-tighten as the cap housing is fragile.

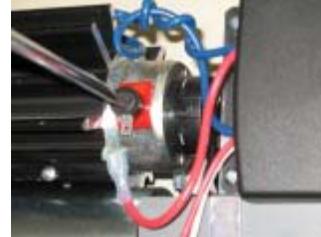

F. Gently put the transformer wire back into place.

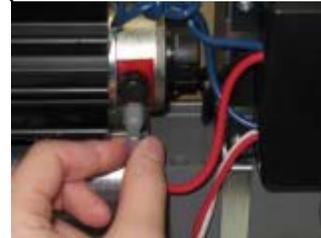

3. Replacing Brush 2

A. Gently take off the BLACK transformer wire.

B. Repeat step 2 as listed above.