

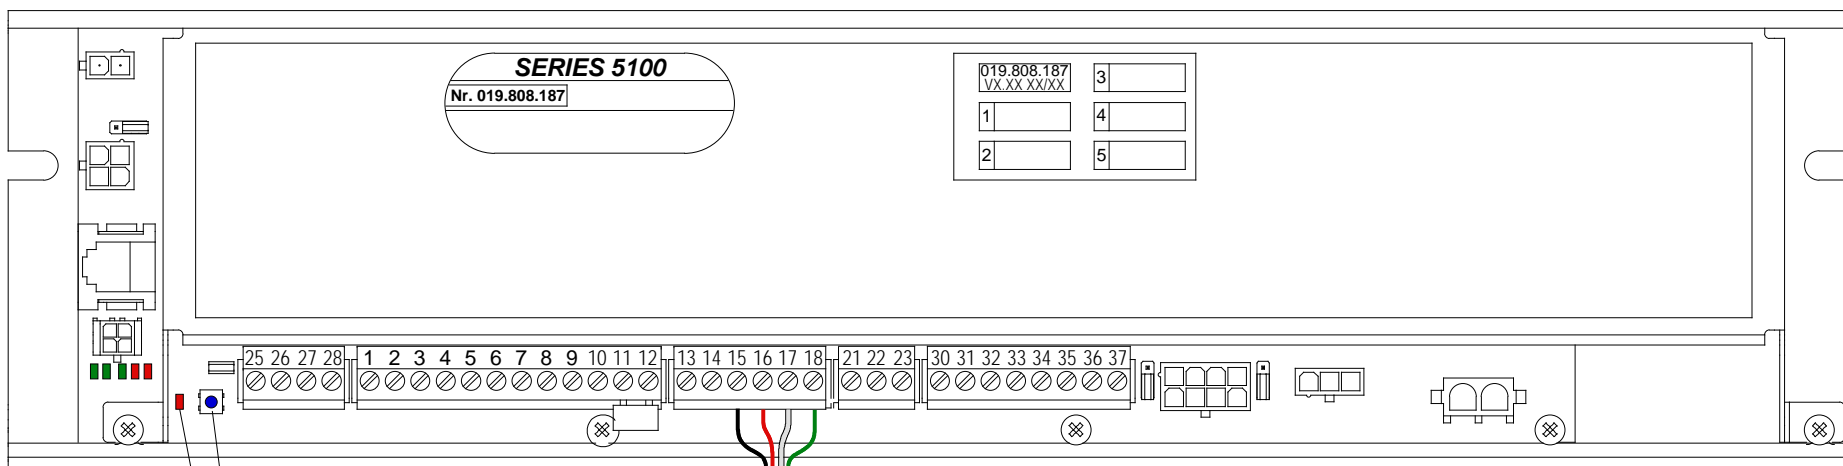
 
 
 


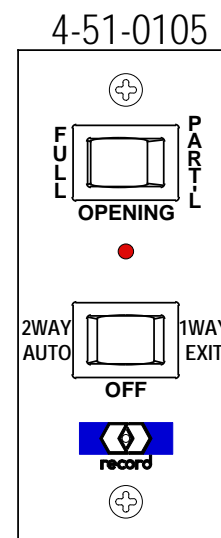
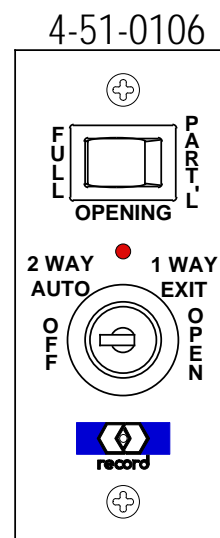
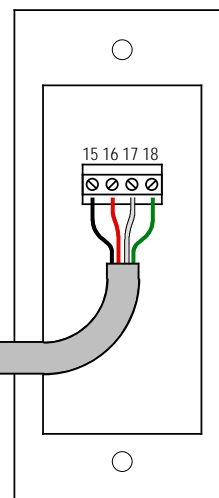
Press and hold the blue Control Switch for 4 flashes of the red Control LED, then release. The first screen at right should appear on the jamb-mounted Display Control Panel. Scroll down (using the AUTO/+ key) to "Control panel" and select it using the  key; select "Mech. Panel", then scroll down and select "Rkr &/or keysw". Press the "PROG" key multiple times until the panel displays "Quit Menu?", then press the  key.



Control LED  
Control Switch

Connect the mechanical switch control panel (either the Rocker switch or combination Rocker/Keyswitch) as shown at right.

Note when used in combination with the Display Control panel, when either panel is turned OFF, the door will be off. In other operation modes (AUTO, EXIT, OPEN, PARTIAL OPEN), the mode is set by the mechanical switch assembly, and will be shown on the Display Control panel.



Series 5100 - Mechanical Control Panels

