
## **Condor Operator Installation Manual**




## **DANGER:**

This operator must be installed and adjusted to ANSI/BHMA A156.10 & A156.19 standards by a qualified person. Serious injury or death may result.

- Remove the dress plates (not shown) from the header. Drill a hole in the back or top of header near the ground bracket to accept a conduit connector. Do not make electrical connections at this time.
- Attach the mounting brackets provided in the bracket kit labelled MA-BRKT. Mount the empty header. See the instruction sheet provided with the bracket kit for details.
- Install the motor/gearbox into the header and securely fasten with the 4 bolts and washers provided in the parts bag labelled MA-PB-MGB. Secure the the bolts completely. Route the ground wire from the "horse shoe" bracket to the gearbox ground screw as shown.
- Install the control box into the header. See the instructions provided with the control MA50777 (Section A).

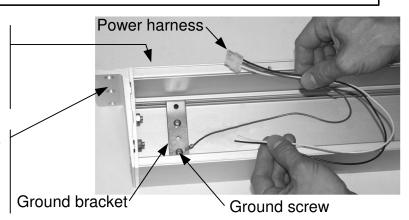

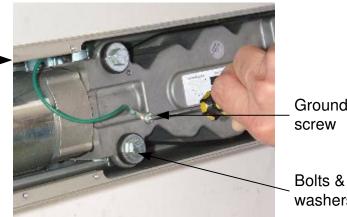

Ground

washers

- Attach the arm. See the instructions provided with the arm. Unit must be powered for this step.
- Remove power from unit.
- Reset the power. Adjust the control to the latest ANSI/BHMA standards. See the instructions provided with the control MA50777 (Section B).
- Re-attach the dress plates.
- Complete a Walk-Through-Test. Ensure compliance with the latest ANSI/BHMA A156.10 & A156.19 standards & all applicable national & local standards.